

45L GREASE TRAP RISER

INSTALLATION MANUAL



PRODUCTS TO USE THE GREASE TRAP RISER WITH

EI CODE	PRODUCT DESCRIPTION	DRILL GUIDE TO FOLLOW
84010	45L Grease Trap	1

INSTALLATION INSTRUCTIONS


1. Remove the grease trap lid from the grease trap body and remove the strainer from inside the grease trap.



2. Before installing the 45L Grease Trap into the ground attach the Riser to the grease trap.

a. For 150 mm Riser:

- i.** Place the riser on top of the grease trap and centralise the riser (side with notches away from grease trap).

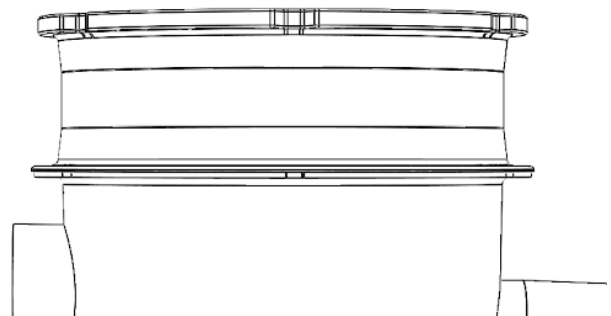

45L GREASE TRAP RISER

INSTALLATION MANUAL



- ii. Use self tapping screws (4 minimum) to screw through the riser lip into the grease trap lip.



- ii. Be careful when installing the grease trap into the ground to avoid cutting your hands on the screws you have just used to secure the riser.

- b. For 300 mm Riser:

- i. Place Riser on a level surface.





45L GREASE TRAP RISER


INSTALLATION MANUAL




- ii. Invert grease trap and place on top of riser. Centralise the grease trap on the riser so that there is a consistent distance from the edge of the grease trap lip to the riser all the way around (notches on the grease trap and the riser are not required to align).

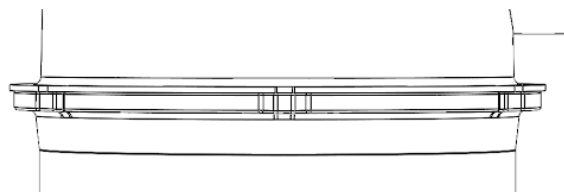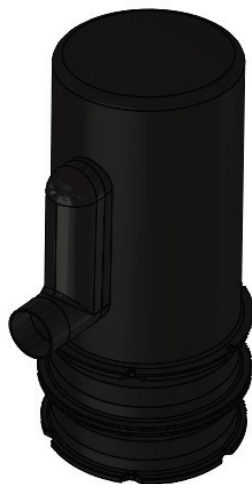

- iii. Use the provided self tapping screws (4) to secure the grease trap to the riser. Screw through the underside of the grease trap into the riser.

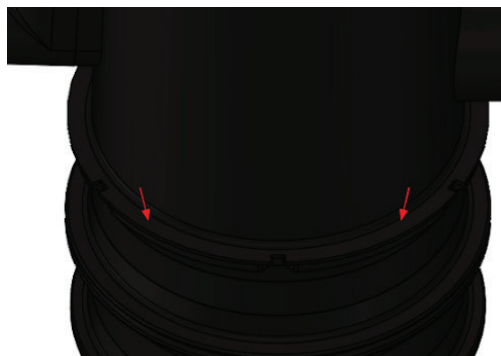

4. Backfill around the grease trap and riser.

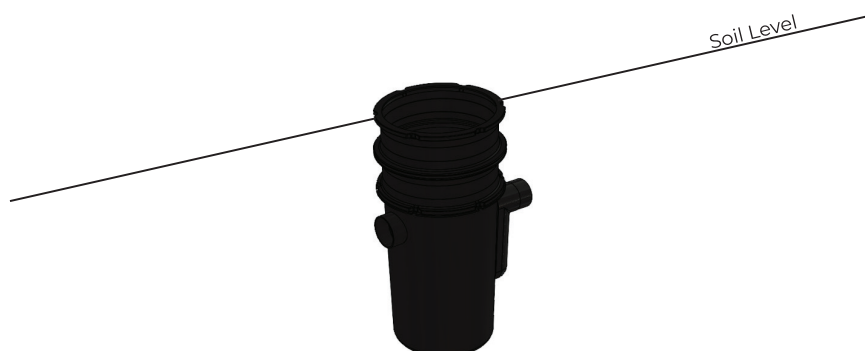

45L GREASE TRAP RISER

INSTALLATION MANUAL



5. Reinsert the strainer into the grease trap. Install the 45 L Grease Trap Lid on top of the riser. Align the tags on the grease trap lid with the corresponding cutouts on the Riser. Drill stainless steel, self tapping screws around the perimeter of the lid (4). Ensuring that the screws pass through the Riser flange.

